


THE GRANITES

ELEV 1299

AVFAX CODE 8402

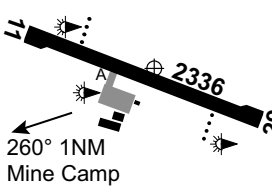

NT  
203254S      1302100E

UTC +9:30  
VAR 3 DEG E

YTGT  
CERT

AD OPR Newmont Tanami Pty Ltd, PO Box 8020, Alice Springs, NT,  
0871. Email: gts.airport@newmont.com. PH AD Manager 0407 953  
412. ARO 0407 817 493 (H24).

REMARKS

PPR from AD OPR 24HR before intended OPS. Phone AD OPR.

HANDLING SERVICES AND FACILITIES

ACFT marshalling is provided for all ACFT ABV 5,700KG MTOW.

AERODROME OBSTACLES

1. Lit masts:

a. 225FT ABV ARP, BRG 292 DEG MAG 4,918M FM SOT RWY 29, infringes HZS by 84FT.  
b. 169FT ABV ARP, BRG 274 DEG MAG 3,524M FM ARP, infringes HZS by 31FT.
2. Trees on RWS flyover.
3. RWY 11/29 transition infringement trees 400M E of RWY 11 THR 75M S of RCL infringes TNS by 41FT.
4. Crane 226FT AGL BRG 276 DEG MAG 1.9NM FM ARP, infringes inner HZS by 92FT.

METEOROLOGICAL INFORMATION PROVIDED

1. TAF CAT C, METAR/SPECI.
2. AWIS FREQ 133.05 (requires three one-second pulses to activate) - Report faults to AD OPR.
3. AWIS PH 08 8993 8382 - Report faults to AD OPR.

PHYSICAL CHARACTERISTICS

11/29      114   77a   PCR 224/F/A/1.08 MPa/U Sealed

WID 30      RWS 150

AERODROME AND APPROACH LIGHTING

RWY 11/29      LIRL      PAL+AA 126.7

RWY 11/29      PAPI(1)      PAL+AA 126.7      3.0 DEG52FT

RWY 11/29      PTBL(2)

BY PRIOR  
ARRANGEMENT

- (1) Left side.
- (2) EMERG only. 2HR PN.

1. PAL activates AD LGT for 30 MIN.

2. RWY 11/29 edge light spacing: 60M.

3. Solar RWY and TWY LED LGT in use. Polycarbonate LGT fittings with solar panel on frangible aluminium mounting.

4. Solar PAPI LED LGT in use. PAPI units mounted on frangible aluminium mounting. PAPI unit solar panels located outside RWS.

OTHER LIGHTING

TWY LGT: Blue edge.

ATS AND AERODROME COMMUNICATION FACILITIES

FIA      BRISBANE CENTRE      118.9

LOCAL TRAFFIC REGULATIONS

1. All ACFT to track on RWY CL and turn on turning nodes only.
2. All turns to be MAX RAD and MNM speed to avoid SFC damage.
3. All jet ACFT to use idle power for movements on the APN with the exception of brakeaway thrust to initiate taxi.

FLIGHT PROCEDURES

Right hand circuits required when OPR on RWY 29.

**CTAF - AFRU 126.7****CHARTS RELATED TO THE AERODROME**

1. WAC 3231.
  2. Also refer to AIP Departure and Approach Procedure.
-